

Wešeraj




UPUTSTVO INSTRUCTIONS

PRANJE

Washing Instructions

- 1. Ubacite veš u mašinu i zatvorite vrata (do 10 kg)**
Put the laundry in the machine and close the door (up to 10kg)
- 2. Ubaci žetone u žetonjeru**
Insert coins into the coin acceptor
- 3. Odaberite program za pranje**
Select a washing program
- 4. Pritisnite START**
Press START

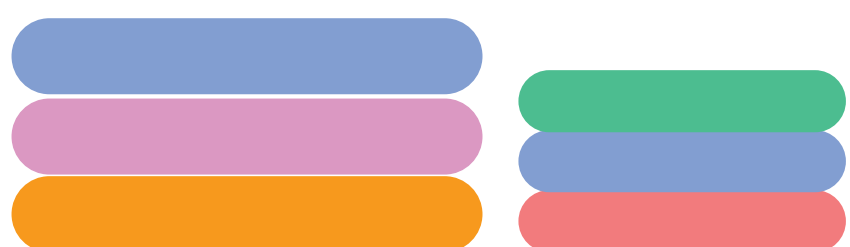

1 Žeton = 20 minuta sušenja
1 Coin = 20 minutes of drying

Deterdžent, omekšivač i sredstvo za dezinfekciju se doziraju automatski

Detergent, softener and disinfectant are dosed automatically

Pažljivo ubacite žeton

SUŠENJE

Drying Instructions

- 1. Ubacite veš u mašinu za sušenje i zatvorite vrata**
Put the laundry in the dryer machine and close the door
- 2. Ubaci žetone u žetonjeru**
Insert coins into the coin acceptor
- 3. Odaberite program za sušenje**
Select the drying program
- 4. Pritisnite START**
Press START



Vreme sušenja zavisi od količine, vrste materijala i temperature na kojoj se veš suši.

Drying time depends on the amount and type of material, as well as drying temperature.

Insert coin gently

Ukoliko imate bilo kakve smetnje na usluzi ili kvar na funkcionisanju mašina i uređaja pozovite nas na broj:

If you have any service disruptions or malfunctions of the machines and devices call this number:

+38163377100